


Guardian 2.0



Radar & Active Infrared Sensor for Automatic Doors

Description


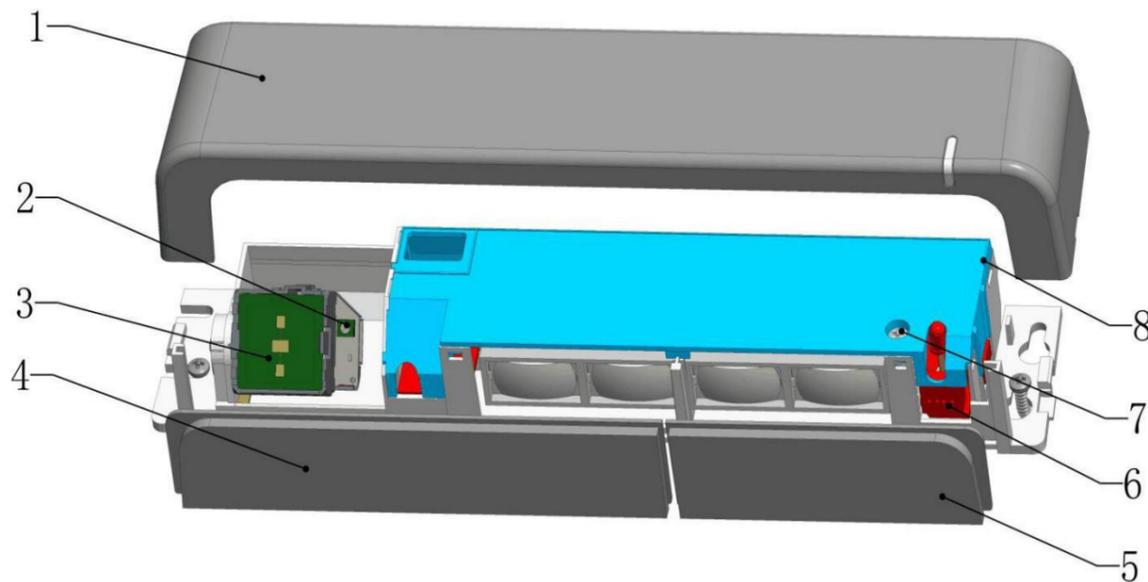


1. Main Connector
2. Regulation resistance of microwave sensor
3. Antenna
4. IR light blocking cover
5. IR light blocking cover
6. Dip switch
7. Detection range adjustment
8. (Labelled in diagram but not explicitly defined in the list)



Technical Specifications

Technology:	Microwave Doppler Radar Transmitter frequency: 24.150 GHz Transmitter radiated power: < 20 dBm EIRP Transmitter power density: < 5 mW/cm ²	Active Infrared Infrared wavelength: 850 nm
Detection Mode:	Motion Min. detection speed: 5 cm/s	Presence Typical response time: < 300 ms
Angle:	15° to 50°	- 5° to + 8°
Supply Voltage:	12V - 30V DC +/- 10%	
Mains Frequency:	50 Hz - 60 Hz	
Max Power Consumption:	< 2 W	
Output:	Relay (free of potential change-overcontact) Max contact voltage: 30V DC/ V AC Max contact current: 2A (max)	
Mounting Height:	1.8 m to 3 m	
Temperature Range:	From - 25 °C to + 70 °C	
Noise:	< 70 dB	
Retention Time :	1s	
Degree of Protection:	IP54	
Dimension:	271 mm (L) x 59 mm (H) x 41 mm (W)	
Material:	ABS & PMMA	
Cable Length:	3 m	





1. OPENING THE SENSOR

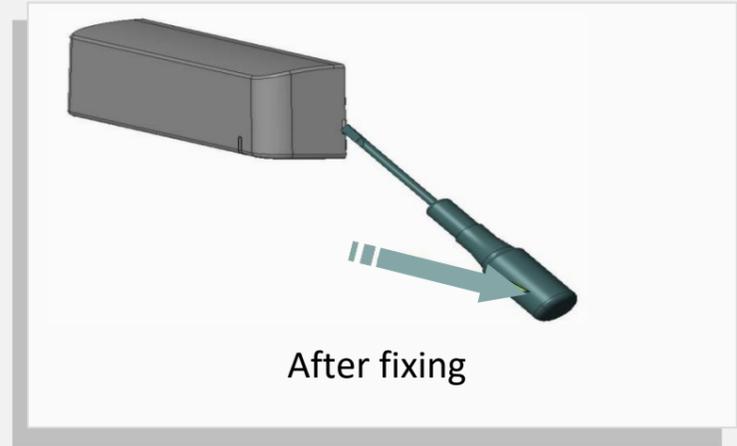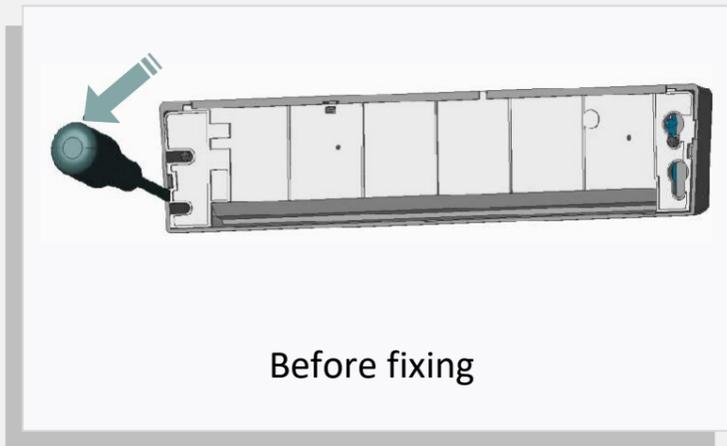



2. MOUNTING AND WIRING

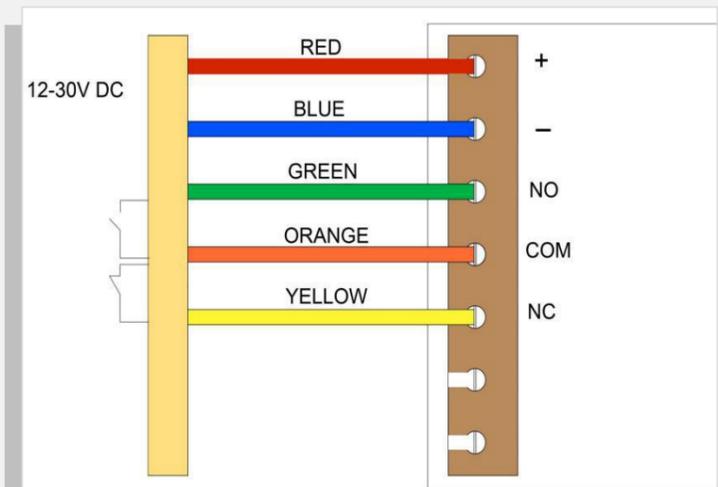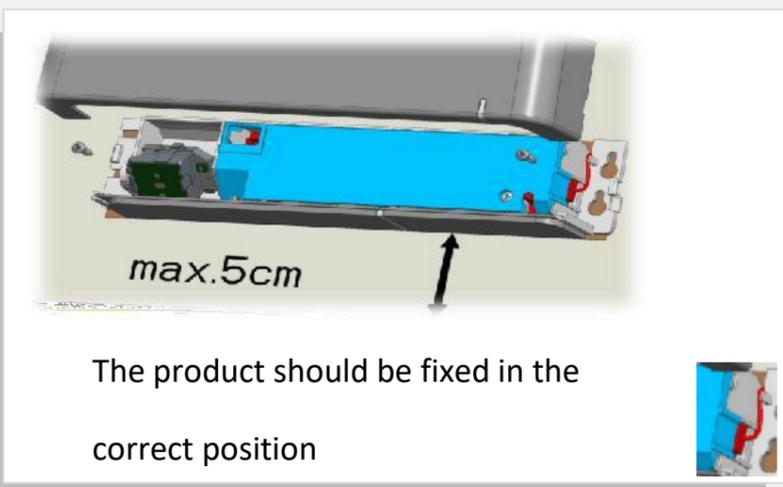

3. RADAR DETECTION & ADJUSTMENT

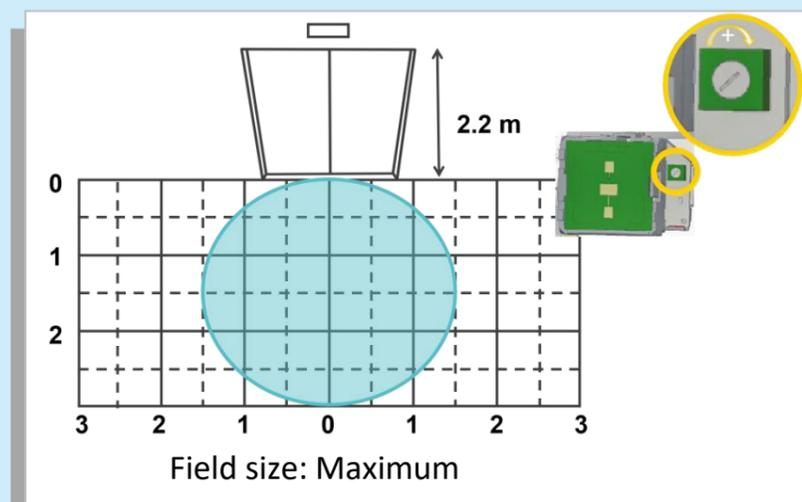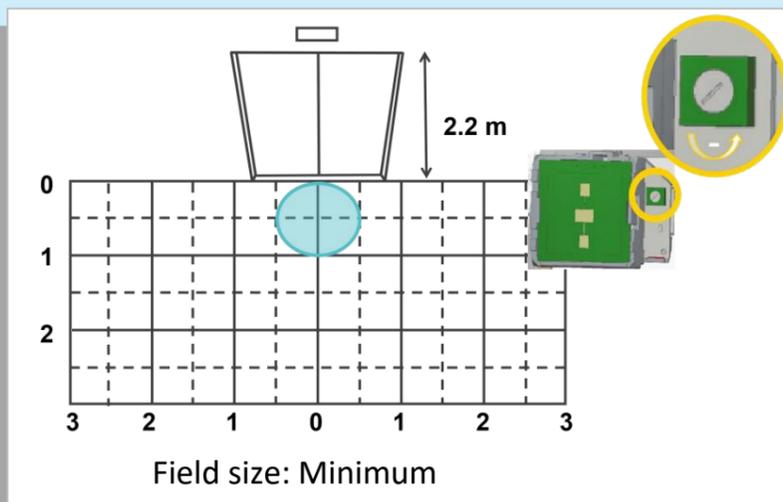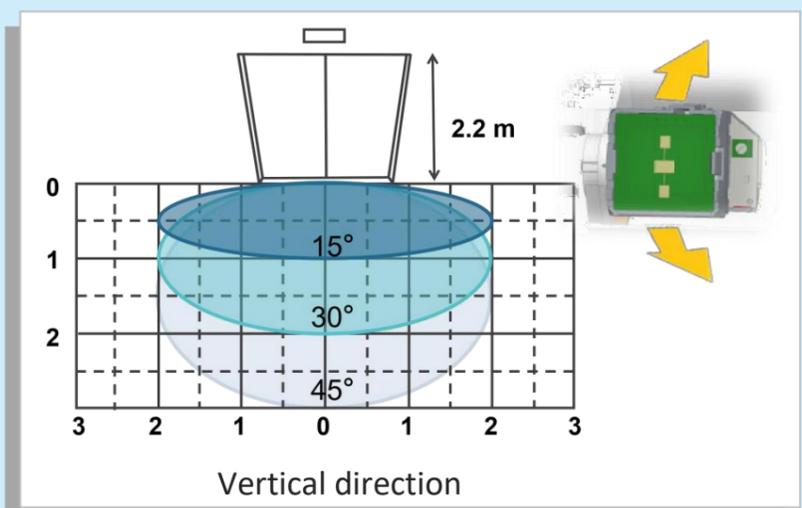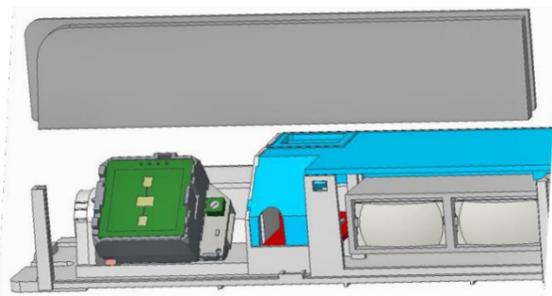

Tips

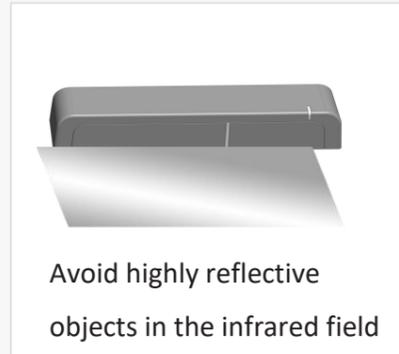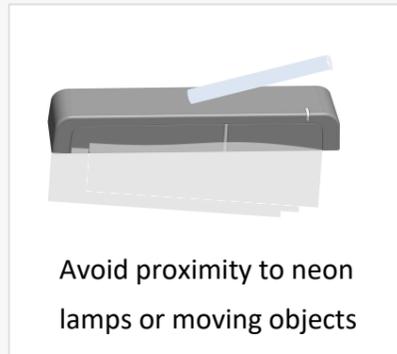

Light Indicator

Green LED lights on	Motion part is on
Red LED lights on	Infrared part is on
Orange LED flashes	Setting model
The LED is off	Check wiring
When turning on sensor, orange LED flashes but green LED and red LED is off	Check if the dip switch turns on motion and infrared module
When turning on sensor, orange LED flashes but green LED is off	Check if the dip switch turns on motion module
When turning on sensor, orange LED flashes but red LED is off	Check if the dip switch turns on infrared module
Green LED keeps lighting up	<ol style="list-style-type: none">1) Check if there are objects (e.g. rain drop) moving on the cover2) Check if the sensor vibrates and fastened it firmly3) Check if the sensor sees the door moving and adjust the radar angle
Red LED keeps lighting up	<ol style="list-style-type: none">1) Check if there are objects (e.g. rain drop) on the cover2) Check if the sensor vibrates and fastened it firmly3) Check if the sensor sees the door and adjust the IR angle4) Check if the sensor is disturbed by external conditions, and turn off the switch 4